

#### To assemble the bed you require

- drill-driver with OZ bits, Philips screwdriver, 8mm hex key, hammer, two adults.

The set includes:

- Head/foot end (1) – 2 pcs.
- Side rail (2) – 2 pcs.
- Middle bar (3) – 1 pc.
- Middle leg (4) – 1 pcs.
- Construction bar with legs (5) – 2 pcs.
- Head rest (6) – 1 pc.
- Maxifix cam (A) – 11 pcs.
- Maxifix coupling (B) – 11 pcs.
- Maxifix bolt (C) – 11 pcs.
- Flat fitting (D) – 2 pcs.
- "L" fitting (E) – 2 pcs.
- Stabilising pin (F) – 7 pcs.
- "UT" fitting (G) – 4 pcs.
- 4 x 15 screw (short) – 14 pcs.
- 5 x 25 Spax screw (long) – 24 pcs.

#### 1. Step

Prepare: bed ends (rounded), Maxifix couplings and bolts (8 pcs.), Maxifix cam (1 pc.), stabilising pin (4 pcs.), 8mm hex key, hammer.


Screw the Maxifix couplings (B) clockwise with the 8mm hex key to the outer holes on the ends of the bed ends (1). **IMPORTANT:** The coupling has to be screwed until it's aligned with the wood surface (no deeper).



 **Allgemeiner Sicherheitshinweis:**

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

Then insert the stabilising pin (F) in the middle hole on both ends of the bed ends (1) and hammer until it reaches the bottom. The next step is to screw the Maxifix bolts into the previously mounted couplings. One of the bed ends has a 35 mm diameter hole drilled in the middle. Insert the Maxifix cam the hole insert in such a way that the arrow on the cam is turned in the direction of the smaller hole in the edge.

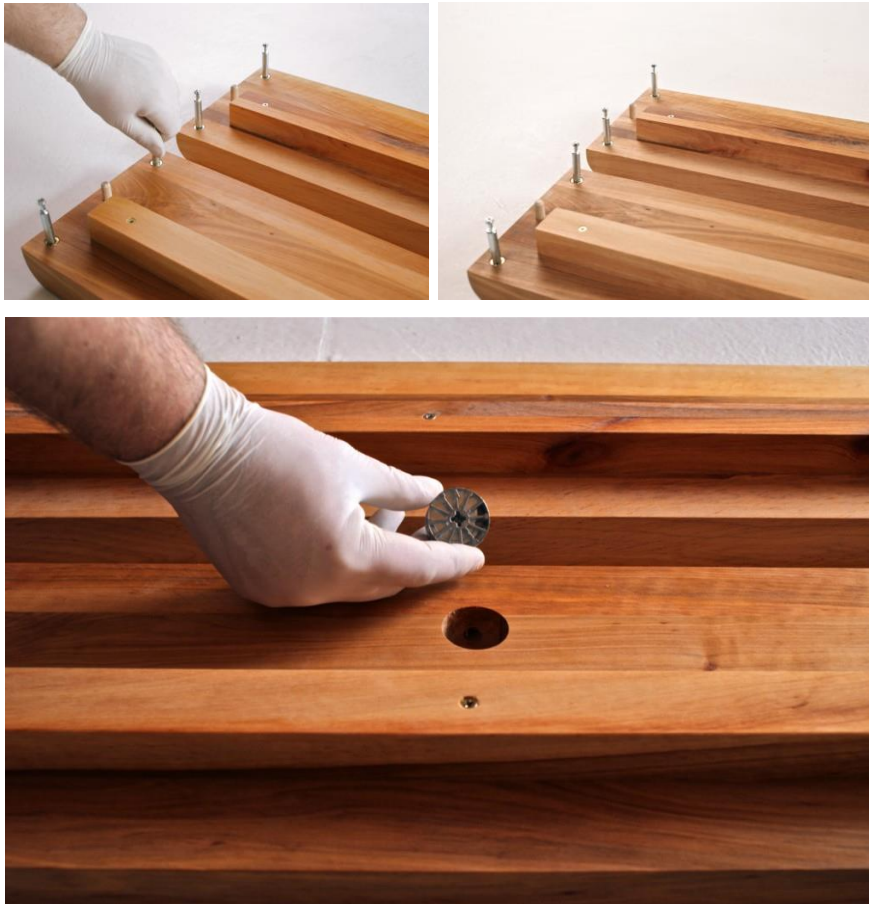

## 2. Step


Prepare: side rails, Maxifix cams (10 pcs.), "UT" fittings (4 pcs.), flat and "L" fittings (2 pcs. each), 5 x 25 Spax screws (24 pcs.), 4 x 15 screws (8 pcs.), middle bar with middle leg and construction bars with legs (2 pcs.).




**Allgemeiner Sicherheitshinweis:**

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

Insert the Maxifix cams into the 35 mm diameter hole in such a way, so that the arrows on the cams are turned in the direction of the smaller holes in the edge. Then with the use of a drill-driver and the 5 x 25 Spax screws secure the "UT" fittings to the side rails (2) as per the marked holes (2 fittings per one side rail). **IMPORTANT:** Use the 5x25 Spax screws (4 pcs. per one fitting).

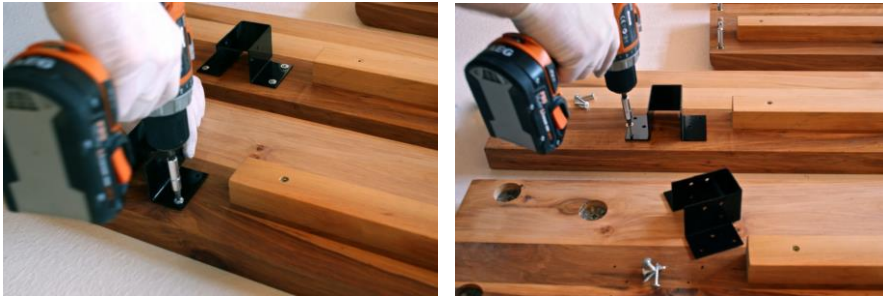

With the use of 4x15 screws mount the flat fitting on the side rails in the middle as per the marked holes (see picture below).

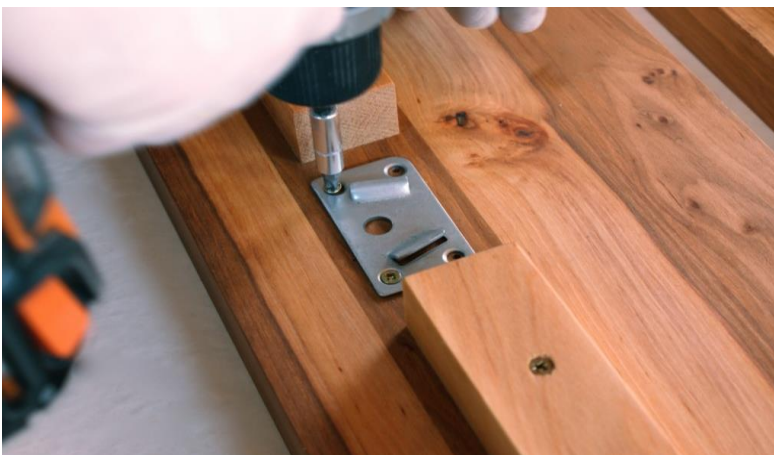

Now assemble the side rails and bed ends (1 and 2) fitted with the A, B C and D elements together, so that the bolts (C) and stabilising pins (F) enter the horizontal holes in the side rails. Lag together so that the two bed elements adjoin. The bars supporting the rack must be inside the frame on one level. With the use of Philips screwdriver turn the Maxifix cams (A) all the way clockwise. The cam should turn at least 135 degrees (3/8 of a turn) to secure the elements. Place the bed frame on the construction bars (6) so that the ends of the bar enter the "UT" fittings (G), and secure the construction bar (6) with the 5x25 Spax screws as per the holes in the "UT" fitting (G) (two screws per one fitting on each side).

Mount the "L" fittings on both ends of the middle bar (4) with the use of a drill-driver and 4x15 screws, and attach the leg (5) in the middle of the bar, as per the drilled hole. Place the middle bar (4) aligning the "L" fittings (E) with the flat fittings (D).




**Allgemeiner Sicherheitshinweis:**

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!



### 3. Step

Prepare: head rest, Maxifix coupling and bolt (3 pcs. each), stabilising pin (2 pcs.).  
Screw the couplings from the bottom to the middle and outer head rest studs (6). In the remaining studs insert the stabilizing pins and hammer until they reach the bottom. Screw the bolts into the mounted couplings. Mount the head rest on the bed frame in such a way, that the bolts and stabilising pins enter the holes in the upper frame edge. Turn the Maxifix cams in the same manner as for the frame.

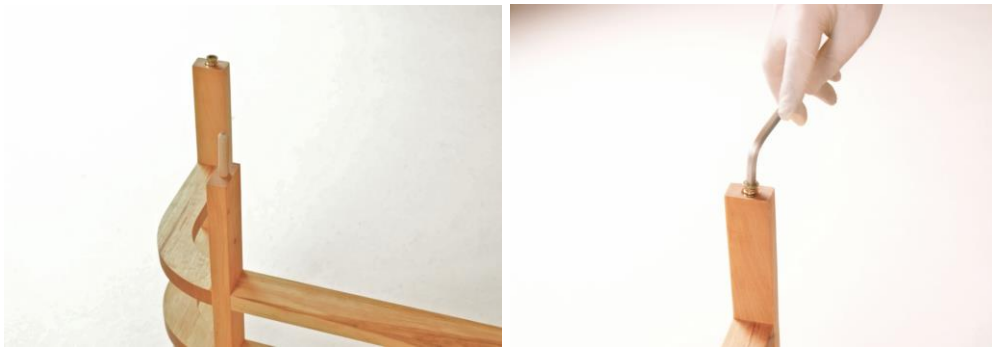

We wish you a pleasant sleeping!



**Allgemeiner Sicherheitshinweis:**

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

### **D - Allgemein**

Achten Sie bitte auf regelmäßige Lüftung der Räume.

Zu trockene Luft fördert das Verziehen der Hölzer.

Feuchtigkeit und Nässe sofort mit einem trockenen Tuch abwischen.

Alle Oberflächen bitte nicht mit scharfen oder spitzen Gegenständen beschädigen.

Oberflächen bitte nicht mit scharfen Putz- oder Reinigungsmitteln behandeln.

Zur Reinigung der Oberflächen verwenden Sie bitte lediglich ein angefeuchtetes Tuch.

Dieses Produkt ist nur für den Einsatz in Privathaushalten konzipiert.

### **Massivholz**

Feine Äste, Verwachsungen und kleine Risse sind naturbedingt und kein Reklamationsgrund.

Farbdifferenzen und verschiedene Maserungsverläufe zeugen von der Echtheit des Holzes und sein kein qualitativer Mangel.

### **Lackierte Oberflächen**

Gegenstände bitte nicht ohne geeigneten Untersetzer auf den Oberflächen abstellen.

Eventuell sichtbare Polier und Schleifspuren sind produktionsbedingt und stellen keinen qualitativen Mangel dar.

### **Geölte und gewachste Oberflächen**

Vermeiden Sie bitte Staunässe auf der Oberfläche und entfernen Sie Getränkereste sofort.

### **GB - General**

Please make sure that your rooms are ventilated regularly.

Very dry or very humid aid will support the warping of wooden products.

Wipe off liquids and moist spots immediately with a soft and dry cloth.

Prevent sharp and pointed objects from direct contact with the surface.

Do not use washing powders or any other substances containing abrasives to clean the surface.

This product is conceived only for private household.

### **Solid wood**

Little knots, connation and little cracks in the wood are typical natural characteristic of wood and not a reason for a claim. Differences in color and grain are also typical for solid wood and not a qualitative defect.

### **Lacquered surfaces**

Please don't put any item without table mat on the surface, it could cause heavy scratches. Maybe visible polish marks are conditions of production and not a reason for a claim.

### **Oiled an waxed surfaces**

Please take care of wetness on the surface and clean it at once.



### **Allgemeiner Sicherheitshinweis:**

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!