

To assemble the bed you require

- drill-driver, Philips screwdriver, 8mm hex key, rubber hammer, two adults.

Wooden elements:

- Foot end (1) – 1 pc.
- Head end (2) – 1 pc.
- Head rest (3) – 1 pc.
- Head rest end (4) – 1 pc.
- Right side rail (5) – 1 pc.
- Left side rail (6) – 1 pc.
- Middle bar (7) – 1 pc.
- Middle leg (8) – 1 pc.
- Construction bar with legs (9) – 2 pcs.
- Stabilising pins (10) – 20 pcs.
- Stabilising bar (11) – 1 pc.
- Head rest angle sill (12) – 1 pc.

Steel elements:

- Maxifix cam (A) – 12 pcs.
- Maxifix coupling (B) – 12 pcs.
- Maxifix bolt (C) – 12 pcs.
- Flat fitting (D) – 2 pcs.
- "L" fitting (E) – 2 pcs.
- "UT" fitting (G) – 4 pcs.
- 4 x 15 screw (short) – 14 pcs.
- 5 x 25 Spax screw (middle) – 24 pcs.
- 4 x 70 screw (long) – 4 pcs. (2 pcs. are already mounted in the head rest)



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

1. Step

With the use of Spax 5x25 screws and a drill-driver secure the "UT" fittings (G) to the side rails (5 and 6) as per the marked holes (4 screws per one fitting).

2. Step

With the use of 4x15 screws and the drill-driver secure the flat fitting (D) to the side rails (5 and 6) as per the marked holes.

3. Step

Screw the Maxifix couplings (B) clockwise with the 8mm hex key to the holes in the bed side rails (5 and 6). The proper holes are milled and placed respectively: in the foot end: 2 and 5, in the head end: 2, 5, 7 and 10. **IMPORTANT:** The coupling has to be screwed until it's aligned with the wood surface (no deeper).

4. Step


Prepare the steel Maxifix bolts (C) and screw them clockwise to the Maxifix couplings (B).

5. Step

Place the stabilising pins (10) in the rest of the side rails holes (5 and 6) and hammer until they reach the bottom.

6. Step

Prepare the Maxifix cams (A) and insert them into the holes drilled in the head and foot ends (1, 2, 3 and 4) so that the arrows on the cams are turned in the direction of the edges, where the horizontal holes are drilled.

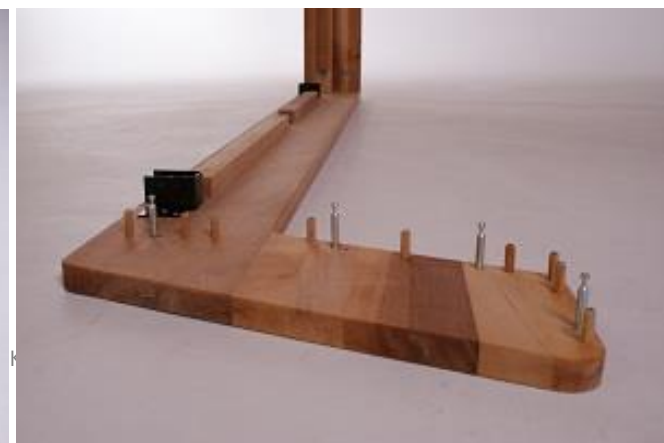

7. Step

Assemble all the frame elements together, so that they adjoin tightly. The stabilising bolts should fit in the holes, while the Maxifix bolts should fit in the cams. To facilitate this, the bed can be placed on the side rail. Remember to place the stabilising bar in the milled grooves in the head rest elements and head rest end.

8. Step

With the use of Philips screwdriver turn the Maxifix cams (A) all the way clockwise. The cam should turn at least 135 degrees (3/8 of a turn) to secure the elements.

9. Step

The prepared bed frame with the rest of the elements should look as illustrated below:



10. Step

Place the bed frame on the construction bars (9) so that the ends of the bar enter the "UT" fittings (G), and secure the construction bars (9) with the 5x25 Spax screws (two screws per one fitting on each side) as per the holes in the "UT" fitting (G).



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

11. Step

Secure the "L" (E) fittings to the middle bar (7) with the use of a drill-driver and 4x15 screws.



12. Step

Insert the middle leg (8) in the middle hole of the bar (7).

13. Step

Place the middle bar (7) aligning the "L" fittings (E) with the flat fittings (D).



Insert the rack and the mattress in the frame.

We wish you a pleasant sleeping!



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!

D - Allgemein

Achten Sie bitte auf regelmäßige Lüftung der Räume.

Zu trockene Luft fördert das Verziehen der Hölzer.

Feuchtigkeit und Nässe sofort mit einem trockenen Tuch abwischen.

Alle Oberflächen bitte nicht mit scharfen oder spitzen Gegenständen beschädigen.

Oberflächen bitte nicht mit scharfen Putz- oder Reinigungsmitteln behandeln.

Zur Reinigung der Oberflächen verwenden Sie bitte lediglich ein angefeuchtetes Tuch.

Dieses Produkt ist nur für den Einsatz in Privathaushalten konzipiert.

Massivholz

Feine Äste, Verwachsungen und kleine Risse sind naturbedingt und kein Reklamationsgrund.

Farbdifferenzen und verschiedene Maserungsverläufe zeugen von der Echtheit des Holzes und sein kein qualitativer Mangel.

Lackierte Oberflächen

Gegenstände bitte nicht ohne geeigneten Untersetzer auf den Oberflächen abstellen.

Eventuell sichtbare Polier und Schleifspuren sind produktionsbedingt und stellen keinen qualitativen Mangel dar.

Geölte und gewachste Oberflächen

Vermeiden Sie bitte Staunässe auf der Oberfläche und entfernen Sie Getränkereste sofort.

GB - General

Please make sure that your rooms are ventilated regularly.

Very dry or very humid air will support the warping of wooden products.

Wipe off liquids and moist spots immediately with a soft and dry cloth.

Prevent sharp and pointed objects from direct contact with the surface.

Do not use washing powders or any other substances containing abrasives to clean the surface.

This product is conceived only for private household.

Solid wood

Little knots, connotation and little cracks in the wood are typical natural characteristic of wood and not a reason for a claim. Differences in color and grain are also typical for solid wood and not a qualitative defect.

Lacquered surfaces

Please don't put any item without table mat on the surface, it could cause heavy scratches. Maybe visible polish marks are conditions of production and not a reason for a claim.

Oiled an waxed surfaces

Please take care of wetness on the surface and clean it at once.



Allgemeiner Sicherheitshinweis:

Nicht mehr benötigte Verpackungsmaterialien und Kleinteile von Kindern fernhalten! Schwere Elemente nicht alleine heben!